


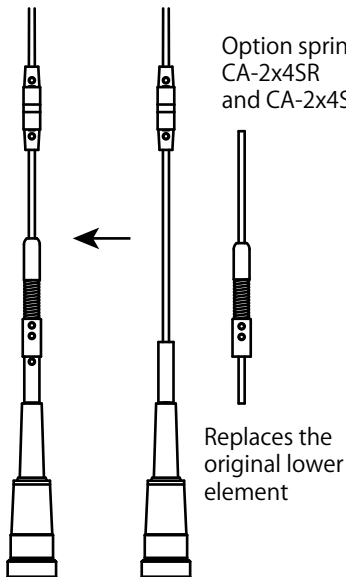

Option spring for  
CA-2x4SR  
and CA-2x4SR NMO

## CA-SPR installation instructions



- 1) Loosen the set screws in the base of the antenna and from the lower phasing section and remove the lower rod section of the antenna.
- 2) Insert the short rod included with the CA-SPR kit into the base of the antenna and tighten the set screws securely.
- 3) Slide the spring down onto the lower rod and tighten the set screws securely.
- 4) Attach the upper section of the antenna to the top of the spring section tightening the set screws securely.